


NEC PC-98


PS/2 to PC98 keyboard adapter

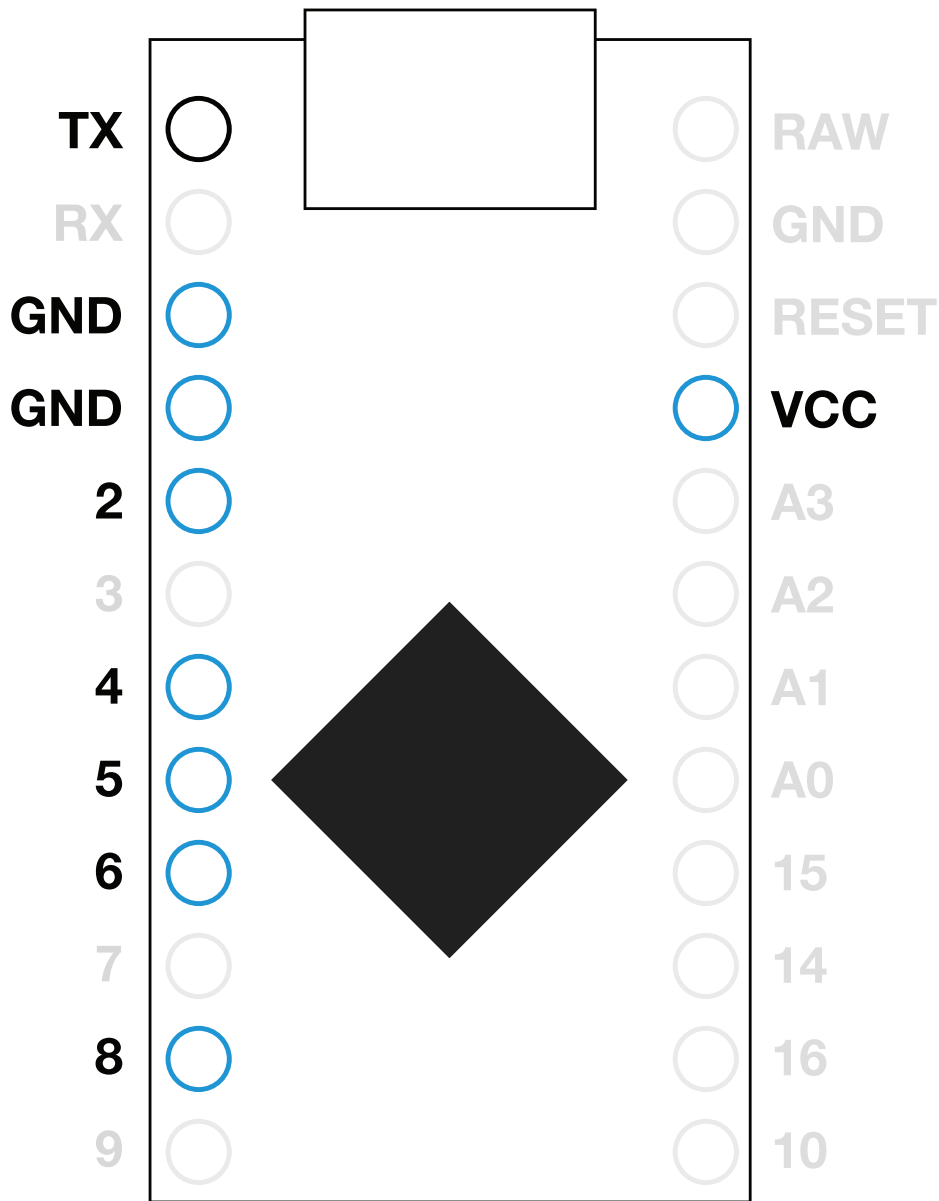

Arduino Pro Micro (Or clone)


Arduino pin

Arduino pin	Connector pin
TX	PC98 RXD
GND	PC98 GND
GND	PS/2 GND
2	PS/2 Clock
4	PC98 RST
5	PC98 RDY
6	PC98 RTY
8	PS/2 Data
VCC	PS/2 + PC98 +5V VCC

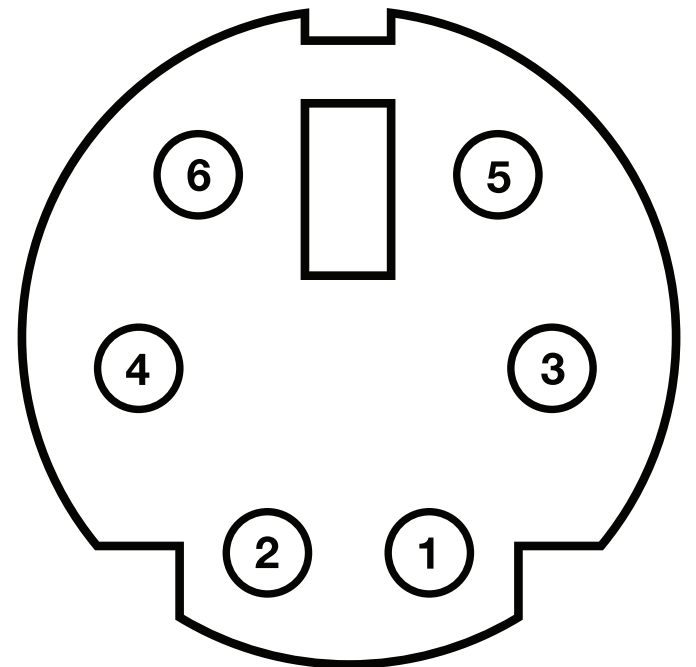

Female PS/2 Connector

- 1 Data
- 2 NC
- 3 GND
- 4 +5V (VCC)
- 5 Clock
- 6 NC

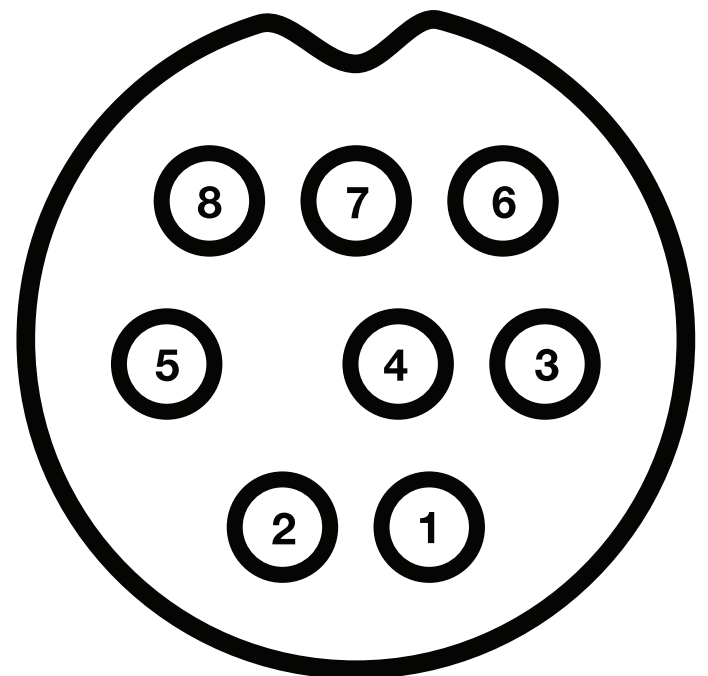

PC98 Keyboard Connector

- 1 RST
- 2 GND
- 3 RDY
- 4 RXD
- 5 RTY
- 6 NC
- 7 NC
- 8 +5V (VCC)